


How to use

LED T8 and LED T10 LED Fluorescent Light Replacement

1. Remove traditional fluorescent tube from the fixture;
2. Remove the ballast and starter if it has. Note that: The LED tube can not directly replace the fluorescent tube before remove the ballast and starter.
3. Remove the wire and install the LED replacement tube and connect as below circuit.
4. Rotate the tube lightly and make the illumination angle as you want.

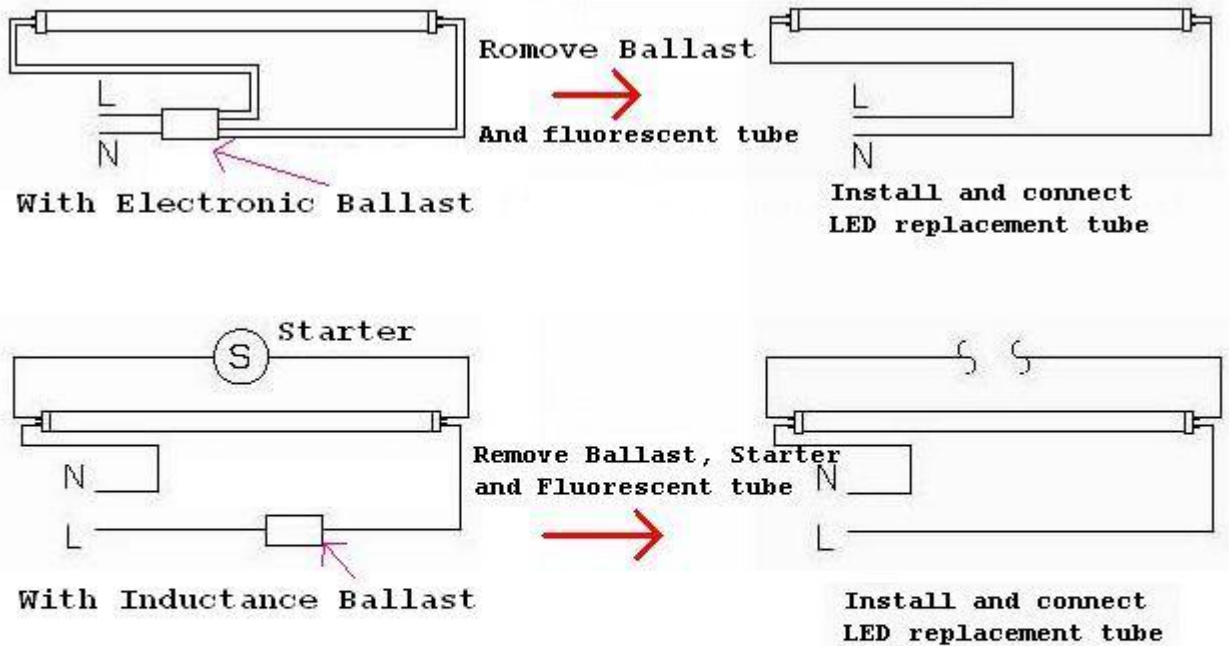

Edited by KEPSUN